

TECHNICAL TIPS

CRANES

Type of Tip:

Error Message 0F11 Is / Was Tripped

Necessary Tools:

Personal Observation

Applicable Models:

SK315 / SK405 / SK415 / SK565 / SK575

My Terex
CRANES

MYTEREXCRANES.COM



 **TEREX**

f You in

TECHNICAL TIPS

CRANES



Basic Safety Rules



Danger

Failure to follow the instructions and safety rules in the Operator's Manual and Service Manual appropriate to your machine will result in death or serious injury. Many of the risks identified in the operator's manual are also safety risks when maintenance and repair procedures are performed.

Do not perform maintenance unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
 - The manufacturer's instructions and safety rules
 - Employer safety rules and workplace regulations
 - Applicable government regulations

- You have the appropriate tools, lifting equipment and a suitable location.

The information contained in this technical tip is a supplement to the service manual. Consult the appropriate service manual for your machine for safety rules and risks.

TECHNICAL TIPS

CRANES



Error Message on Display

- There are two instances in which the operator will receive this error message.
- The first is when the crane is initially connected to the power source and the phases are incorrect and the crane will not start.
- Once two of the phase connections at the source have been swapped and the crane starts the message will be displayed. There are no further issues and the message is displayed due to the way the control software is written.

